

IT IS HIGHLY RECOMMENDED THAT THE INSTRUCTIONS BE READ THROUGH BEFORE INSTALLATION.



ZIGZAG

PLEATED FABRIC RETRACTABLE SCREEN INSTALLATION INSTRUCTIONS

INSTALLATION TOOLS



INTRODUCTION The Genius ZigZag pleated fabric retractable screen arrives pre-fabricated for the net screen opening dimensions that you have provided.

TENSIONER ADJUSTMENTS
(ADJUST ONLY IF NEEDED. ALWAYS ADJUST IN EQUAL INCREMENTS
AND NEVER MAKE THE CORDS TIGHT – SEE STEP 4)


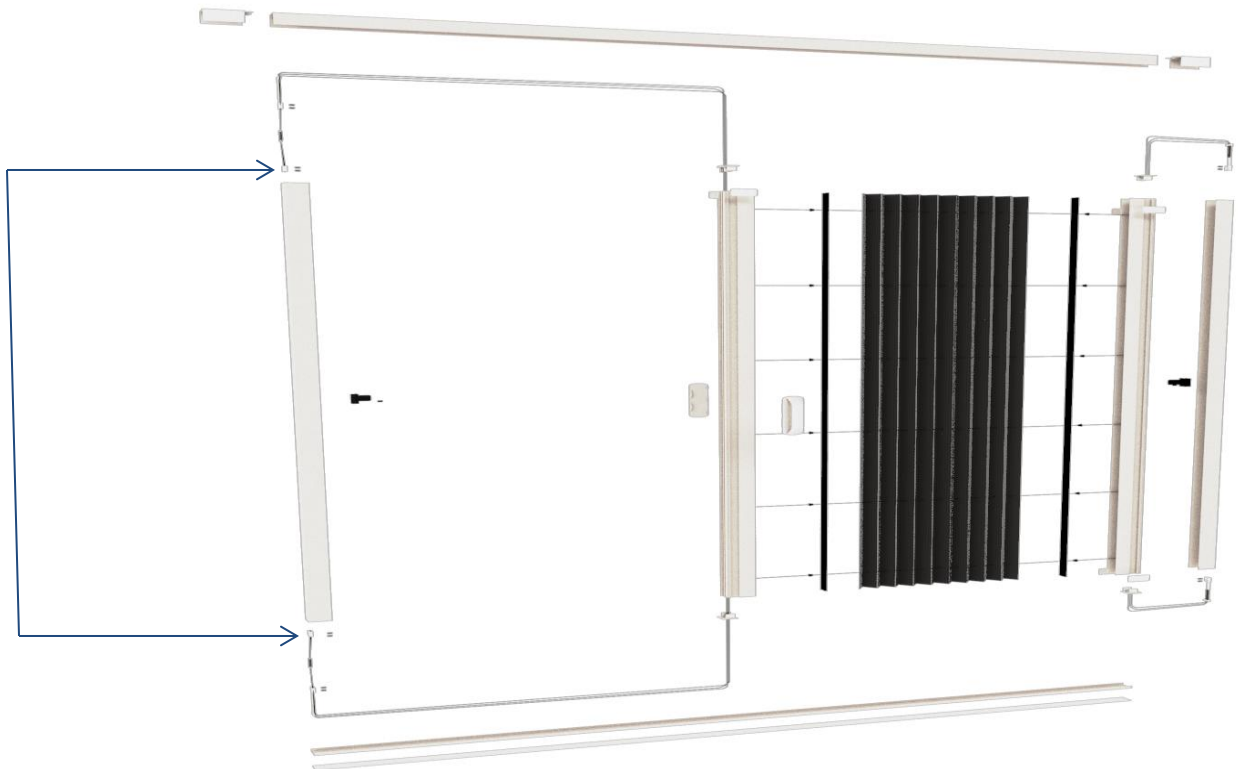


Figure A



STEP 1: Locate the TOP GUIDE and install the plastic TOP GUIDE END CAPS. Now center it within the length of the top of the opening and begin at the center and secure the TOP GUIDE using the screws provided [see Figure B].

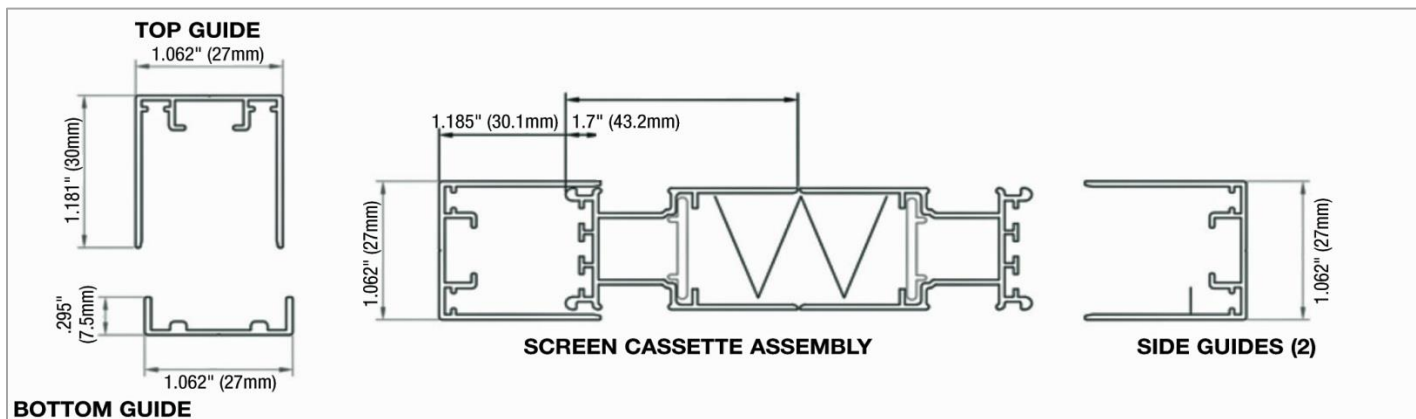


STEP 2: The SCREEN CASSETTE ASSEMBLY with each of the SIDE PROFILES have been pre-sized and arrive packaged in tandem. Position the SCREEN CASSETTE ASSEMBLY with the SIDE PROFILES to the left side of the opening. Grasp the right SIDE PROFILE and gently pull it to the right side of the opening and secure this SIDE PROFILE using the screws provided. Repeat this procedure and secure the left SIDE PROFILE. Note that the TOP GUIDE must be positioned inside the SIDE PROFILES [see Figure C].

⚠ Attention: Take care not to tangle the cords during these two steps

Figure C



STEP 3: Check to ensure that the bottom area where the BOTTOM GUIDE will rest is flat, level and clean. Locate the BOTTOM GUIDE and reveal a short piece of the special ADHESIVE TAPE on the bottom. Position the BOTTOM GUIDE underneath the SCREEN CASSETTE ASSEMBLY and all wires and center it within the length of the opening (leaving equal space at the extremities). Remove the protective covering from the ADHESIVE TAPE and stick the BOTTOM GUIDE to the opening surface. Note that the BOTTOM GUIDE must be positioned inside the SIDE PROFILES [see Figure D and E].

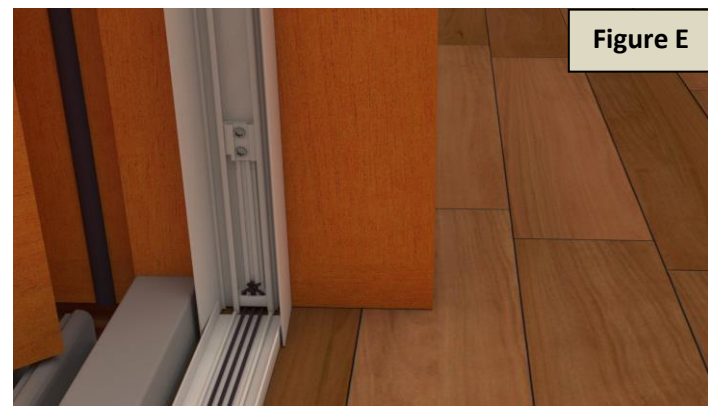

STEP 4: Test the operation of the screen [see Figure F]. **ONLY** if needed you may slightly increase or decrease the tension of the cords to help sliding by adjusting the TENSIONER ADJUSTMENTS [see Figure A, G & I]. The cords should not be over tensioned or made tight; too much tension will cause the screen to operate poorly and can damage the cords. If adjusting the tension always do it uniformly using both TENSIONER ADJUSTMENTS. If desired lubricate the inside of the TOP & BOTTOM GUIDE using silicone spray to improve sliding.

Figure G



Figure H



STEP 5: For a clean look and to promote the easy operation, the ZigZag screen features a full-length finger pull groove in both Pull Bars. Optional handles are also included with the screen and can be installed if desired. To install the handle simply begin by removing the protective cover to expose the adhesive tape on the under-side of the handle. Then align the grooves at the under-side of the handle to the grooves of the Pull Bar and snap the handle into position [see Figure H].

www.geniusscreens.com

Troubleshooting:

Issue: One or more cables droop down from the top guide or one or more cables are slack in the bottom guide

Resolution: Loosen the Allen Head set screws on the tensioner adjustment(s) to release some tension [Figure G & I]. To adjust the top cables adjust the top tensioner adjustment and to adjust the bottom cables adjust the bottom tensioner adjustment. **Untie the knot shown in this image** and gently pull the cable(s) that exhibit any slack until the slack is gone. Retie the knot, re-tension the cables using the tensioner adjustment and tighten the Allen Head set screws.

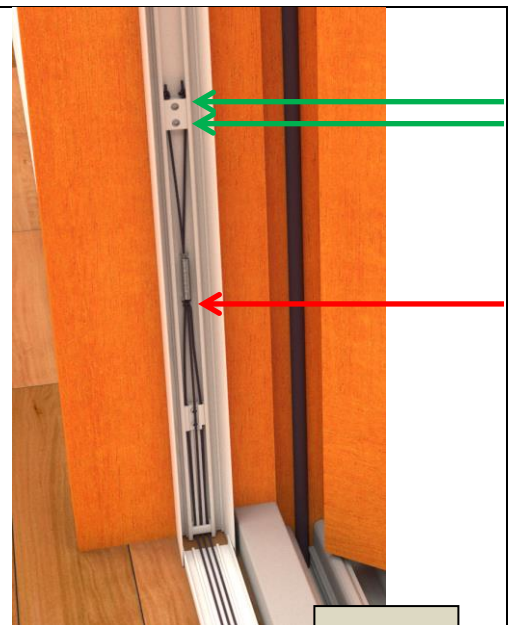


Figure I