



(FULL-SCREEN) REMOVAL GUIDE


THE WORLD'S FIRST FLEXIBLE WINDOW SCREEN

Begin by opening or tilting both sashes of your window toward the inside of the house to expose the window screen track.

STEP 1


Pull the tabs towards each other until you can wrap your hands around the FlexScreen frame. Squeeze both sides inward 4"-6".

(If the tabs are missing, gently press the palm of your hand in the center of FlexScreen to flex both sides inward.)

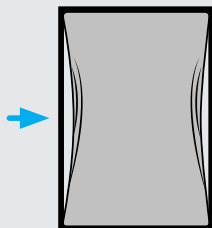


STEP 3

Remove the opposite corner from the screen track.

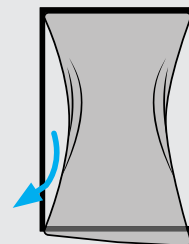

STEP 2

While keeping the sides compressed, slightly lift up FlexScreen and remove one of the bottom corners from the window screen track.

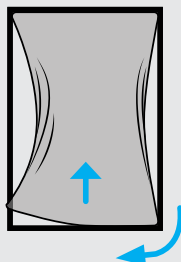

STEP 4

With both corners out of the screen track, pull FlexScreen down from the top screen track and remove the screen.

