
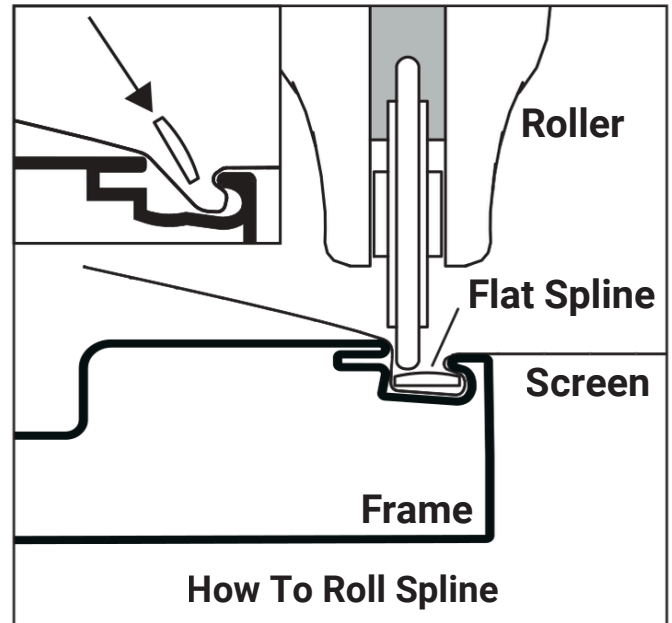


# How to Install Screen Mesh

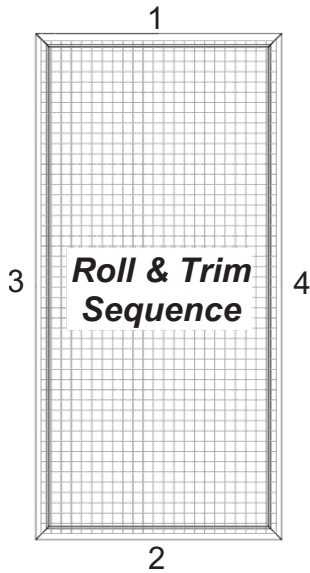


1. Roll Top Spline
2. Pull Screen Snug and Roll Bottom Spline
3. Roll Left Spline
4. Roll Right Spline

**CAUTION!** Do Not Over Tighten the Screen or the Door Frame Could Excessively "Hourglass".

Place Light Tension on the Screen and Allow the Rolling of the Spline to Self Tighten the Screen

Over Tightened Screen Can Cause Excessive "Hourglass"

Properly Tightened Screen Will Have No More Than 1/4" Hourglass.

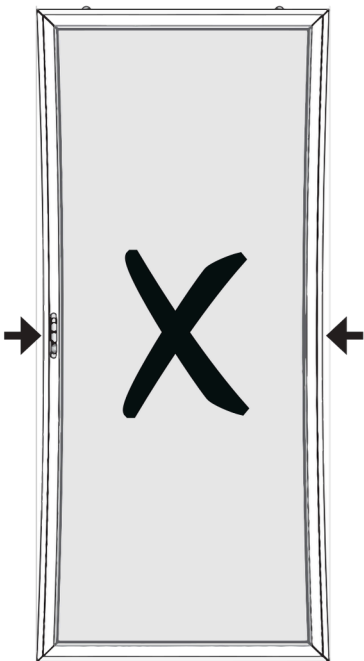

## 5: Trim Tabs Using Knife Guide

