


SAMSEN[®] patio screen doors


Installation Instructions

1: Determine Which Latch
Position is Needed Looking at
the Lock Side of the Handle

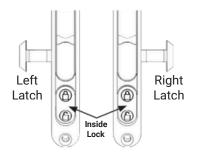


2: If Latch Configuration Needs To Be Changed, Please Refer to Samson Latch Configuration Instructions At www.SamsonPatio.com

3: Install Door Seal

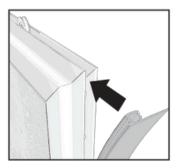


4: Tear Off For Proper Fit

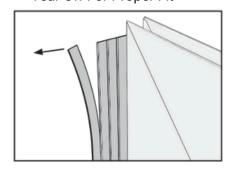


5: If Required, Install Anti-Rattle Pads




6: Be Sure All Rollers Are Retracted.

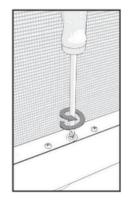

7: Insert Top of Door

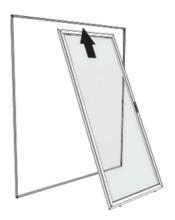

8: Position Bottom of Door. Raise Bottom Rollers (A) and Push in Bottom of Door (B)

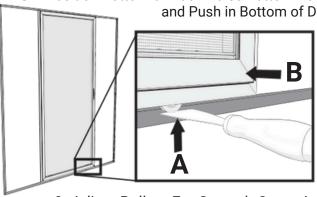

9: Adjust Rollers For Smooth Operation. Bottom Rollers Before Top Rollers

10: Mark Bottom of Latch on Side of Door Frame



12: Measure Down 5/8" for Top Latch Screw

